Scary Flying Ghost!

ACTUALLY FLIES!

Scary Flying Monsters!

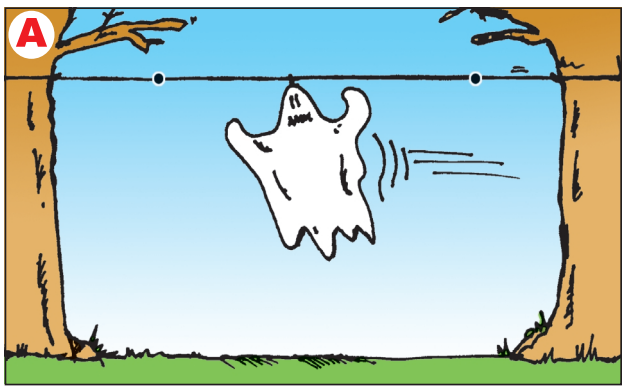

Keep cable as tight and horizontal as possible.

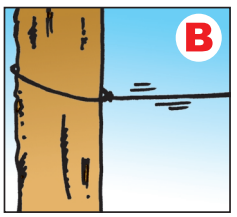

Hook cable around tree.

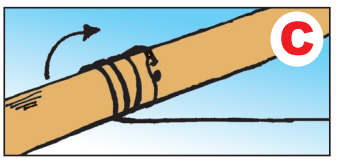

Wind cable around object. Tighten cable before winding.

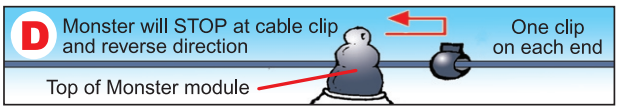

Position clips along cable to stop monster where desired.

SETTING UP YOUR FLYING GHOST OR FLYING MONSTER

For the best performance, we highly recommend keeping the cable **perfectly horizontal** (illus. **A**). **Any incline or decline in the cable may cause the Flying Monster to run poorly or stop!**

- Be sure cable is pulled **as tight as possible!!**
- Refer to illustrations **B** and **C** above for tips on fastening cable ends so there is **no slack in the line.**

OPERATING INSTRUCTIONS

A 3-way switch is located near the battery compartment at the bottom of the plastic module. The Flying Monster has 3 operating modes:
OFF, **ON** (with creepy sounds), and (ON with NO sounds).

Flying Monster is sound activated. Clap your hands or make a loud noise to begin the 'flying' action. The monster will travel back and forth along the cable, automatically reversing directions when reaching the cable end (or cable clips).

OPERATING TIPS

- For the best (and scariest) arm movement, bend the wire ams in a "U" shape, as shown on the side of this carton. Experiment to see what YOU like!
- Keep the cable free of debris, leaves, twigs, ice, etc.
- Keep monster away from tree branches or other obstructions, which may hinder movement.
- Position the two clips along cable to STOP the monster where desired (illus. **D**).

OPERATING YOUR GHOST OR MONSTER OUTDOORS

For best overall performance, we recommend you bring your flying monster indoors during adverse weather conditions (extreme cold, strong winds and/or rain). The flying monster operates best outdoors in temperatures above freezing (32° F). Tekky Toys recommends using heavy-duty, alkaline batteries for best operating performance.

STRANGULATION RISK! KEEP CABLE AWAY FROM CHILDREN! THIS ITEM IS NOT A TOY. SMALL PARTS. CHOKING HAZARD. RECOMMENDED FOR AGES 8 AND UP.

FILLING: ALL NEW MATERIALS.
POLYESTER/POLYESTER FIBER FILL.
Surface washable only.
Requires 3 "AA" batteries, **NOT included.**

SCARY FLYING GHOST and SCARY FLYING MONSTERS are trademarks of Tekky Toys.
Copyright © 2005 Tekky Toys. All Rights Reserved.
Protected by U.S. and International Patents.
MADE IN CHINA.

Visit us at:
www.tekkytoys.com